

4K/HDR

5x2 HDMI Matrix Switcher with Mirrored Outputs

AT-HDR-SW-52ED



The Atlona **AT-HDR-SW-52ED** is a 5x2 HDMI matrix switcher for high dynamic range (HDR) formats. Part of the comprehensive family of Atlona 4K HDR integration products, it features five HDMI inputs and matrixed or mirrored HDMI and HDBaseT outputs. The HDBaseT output transmits video, embedded audio, and Ethernet over distances up to 330 feet (100 meters) to the AT-HDR-EX-100CEA-RX receiver (available separately). The HDR-SW-52ED is HDCP 2.2 compliant and supports 4K/UHD video @ 60 Hz with 4:4:4 chroma sampling, as well as HDMI data rates up to 18 Gbps. It is ideal for the latest as well as emerging 4K/UHD and HDR sources and displays, and includes EDID management features, automatic input switching, and automatic display control. Additionally, 4K downscaling to 1080p @ 60, 30, or 24 Hz is available for the outputs when connected to an HD display. The HDR-SW-52ED can de-embed audio from an HDMI input, or return audio from the HDR-EX-100CEA-RX receiver, to S/PDIF or balanced analog audio outputs. This HDMI switcher can be controlled via Ethernet, RS-232, and IR.


Package Contents

- 1 x AT-HDR-SW-52ED
- 1 x Captive screw connector, 2-pin
- 1 x Captive screw connector, 3-pin
- 2 x Captive screw connector, 5-pin
- 1 x Long rack ear
- 1 x Short rack ear
- 2 x Mounting plates
- 4 x Mounting screws
- 4 x Rack screws
- 4 x Feet w/rubber grips
- 1 x 48 V / 0.83 A DC power supply



IMPORTANT: Visit <https://www.atlona.com/product/at-hdr-sw-52ed> for the latest firmware updates and User Manual.

Front Panel Descriptions

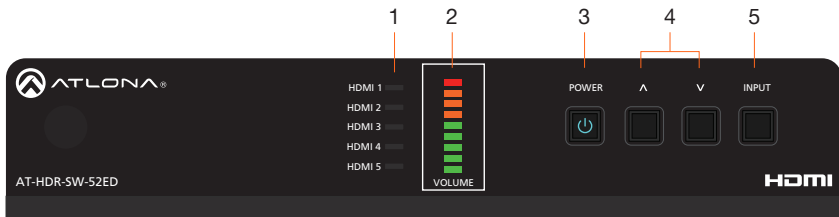

1 HDMI 1 - HDMI 5

These LED indicators display which input is routed to the **HDMI OUT** ports. A solid blue indicator represents the active input being used

2 VOLUME

Displays the output audio level.

3 POWER

Press this button to toggle between “on” and “standby” power states. When in “standby”, A/V is muted. When “on”, A/V muting will be disabled.


4 Cursor Buttons

Press and release these buttons to increase or decrease the audio output volume on the **L/R** port.

5 INPUT

Press and release this button to cycle through each of the HDMI inputs.

Rear Panel Descriptions

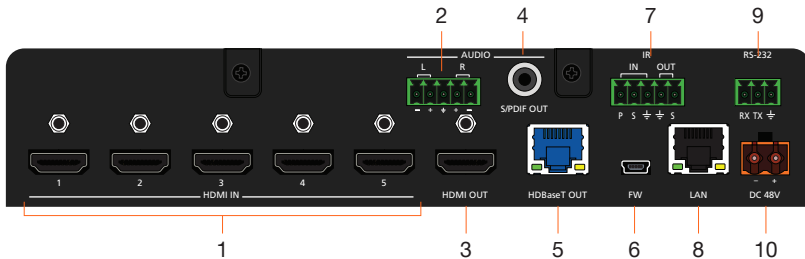

1 HDMI IN

Connect an HDMI cable from each of these ports to an HDMI source.

2 L/R

Connect an analog audio output device to this port using the included captive screw block. Refer to [Audio \(page 5\)](#) for information on wiring.

3 HDMI OUT

Connect an HDMI cable from this port to an HDMI display.

4 S/PDIF OUT

Connect an RCA-type cable from this port to the S/PDIF audio input port on an A/V receiver or other audio output device.

5 HDBaseT OUT

Connect a category cable from this port to the HDBaseT IN port of a compatible receiver unit.

6 FW

Connect a USB-to-mini USB cable to this port from a computer for firmware updates.

IR IN/OUT

Connect an IR emitter to the **OUT** (S, GND) pins to control a display using IR. Connect a control system to the **IN** (P, S, GND) pins. A 5-pin captive screw block is included. Refer to [IR \(page 6\)](#) for information on wiring.

7 LAN

Connect an Ethernet cable from this port to the Local Area Network (LAN). The AT-HDR-SW-52ED includes a built-in web server, which can be used to manage and configure the product.

8 RS-232



Connect the included captive screw block to an RS-232 controller to control the AT-HDR-SW-52ED. Refer to [RS-232 \(page 4\)](#) for more information on wiring.

9 DC 48V

Connect the included 48 V DC power supply from this power receptacle to an available AC electrical outlet. Refer to [Power \(page 4\)](#) for more information on wiring.

Power

Connect the included 2-pin captive screw connector to the **DC 48V** power receptacle on the rear of the unit. The captive screw comes pre-wired as shown.

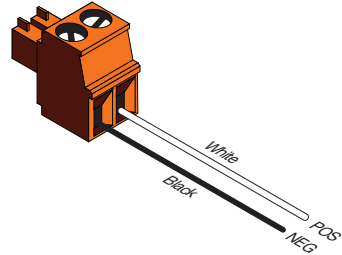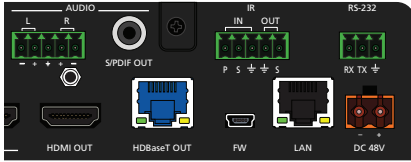



RS-232

The AT-HDR-SW-52ED provides an RS-232 port which can be used to directly control the AT-HDR-SW-52ED using a control system.

1. Use wire strippers to remove a portion of the cable jacket.
2. Remove at least 3/16" (5 mm) of insulation from each of the wires.
3. Insert the wires into correct terminal using the included 5-pin captive screw connector.
4. Attach the 3-pin connector block to the **RS-232** port on the AT-HDR-SW-52ED.



NOTE: Typical DB9 connectors use pin 2 for TX, pin 3 for RX, and pin 5 for ground. On some devices functions of pins 2 and 3 are reversed.

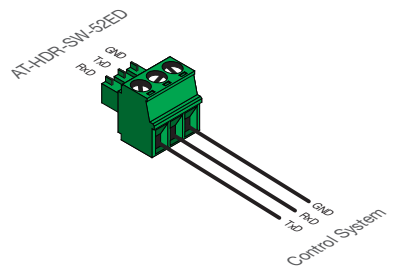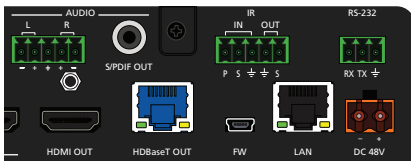


Audio

The included 5-pin captive screw block can be wired to support balanced audio using XLR connectors, or unbalanced audio using RCA connectors.

Balanced Audio (XLR)


Channel	Signal (AT-HDR-SW-52ED)	Pin (XLR)
R	-	3
R	+	2
--	GND*	1
L	+	2
L	-	3

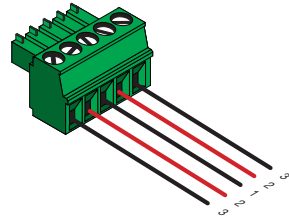


*The GND signal, from the 5-pin captive screw connector on the AT-HDR-SW-52ED, should be tied to pin 1 on both XLR connectors.

Unbalanced Audio (RCA)

Channel	Signal (AT-HDR-SW-52ED)	Pin (RCA)
R	to GND*	--
R	+	+
--	GND	GND
L	+	+
L	to GND*	--

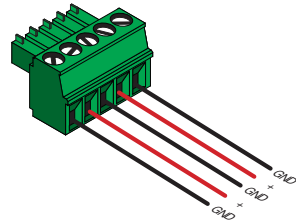



*The GND signal, from the captive screw connector on the AT-HDR-SW-52ED, should be tied to L- and R- on the captive screw connector.

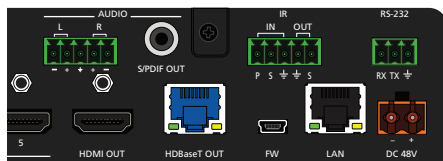



IR

The AT-HDR-SW-52ED provides an IR port which can be used to control a display using an IR emitter or directly control the AT-HDR-SW-52ED using a control system.

Display Control

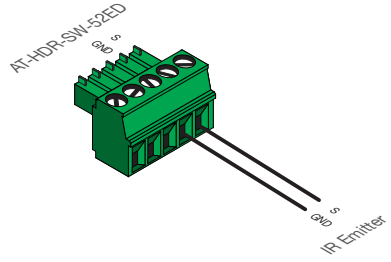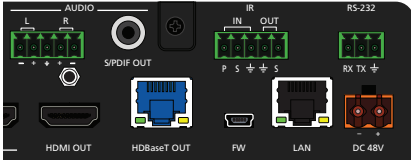

Controlling the AT-HDR-SW-52ED

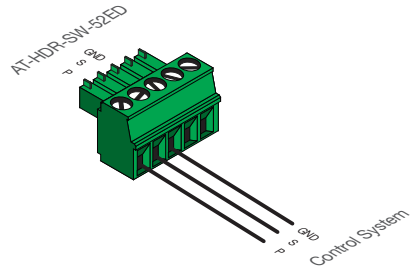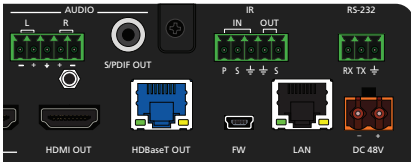

Installation


1. Connect a source device to each of the **HDMI IN (1 - 5)** ports.
2. Connect a display device to the **HDMI OUT** port.
3. Connect a category cable from the **HDBaseT OUT** port to a the HDBaseT IN port of a compatible receiver unit, such as the AT-HDR-EX-100CEA-RX.



IMPORTANT: Stranded or patch cable is not recommended due to performance issues. Shielded cables are strongly recommended to minimize signal noise and interference.

Cable	4K/UHD - Feet / Meters		1080p - Feet / Meters	
HDMI IN/OUT	15	5	30	10
CAT5e	295	90	330	100
CAT6/6a/7	330	100	330	100

4. Connect an Ethernet cable from the **LAN** port to the Local Area Network (LAN). This step will be required in order to access the built-in web server.
5. Connect the included 5-pin captive screw connector to the 5-pin **L/R** port. Refer to [Audio \(page 5\)](#) for more information.
6. Connect an RCA-type cable from the **S/PDIF OUT** port to an audio output device.
7. Connect the included 5-pin captive screw connector to the 5-pin **IR** port to use IR control. Refer to [IR \(page 6\)](#) for more information.
8. Connect an RS-232 cable from the control system to the **RS-232** port. Refer to [RS-232 \(page 4\)](#) for more information.
9. Connect the included power supply to the **DC 48V** connector and connect the power cord to an available electrical outlet.

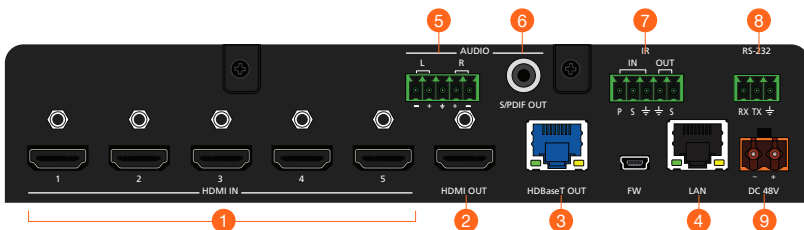

IP Configuration


The AT-HDR-SW-52ED is shipped with DHCP enabled. Once connected to a network, the DHCP server (if available), will automatically assign an IP address to the unit. If the AT-HDR-SW-52ED is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx/16. If this occurs, refer to the AT-HDR-SW-52ED User Manual for more information.

Use an IP scanner, along with the MAC address on the bottom of the unit, to identify the unit on the network. If a static IP address is desired, the unit can be switched to static IP mode.

Switching the IP mode using the Front Panel

1. Make sure the AT-HDR-SW-52ED is powered.
2. Connect an Ethernet cable between the **LAN** port of the AT-HDR-SW-52ED and the Local Area Network (LAN).
3. Press and hold the **POWER** button for approximately 15 seconds. Release the **POWER** button once all the front-panel LED indicators begin to flash. The number of flashes will indicate the currently selected IP mode. Refer to the table, below.

POWER button flashes	Description	Settings
Two	Static IP mode	IP address: 192.168.1.254 Netmask: 255.255.0.0 Gateway: 192.168.1.1
Four	DHCP mode	DHCP server assigned

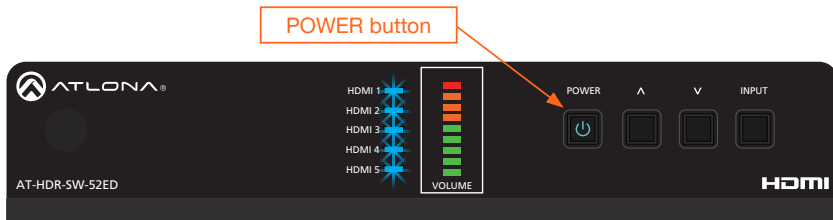

Accessing the built-in Web Server

The AT-HDR-SW-52ED includes a built-in web server, which allows easy management and control of all features. Follow the instructions below to access the web server.

1. Make sure that an Ethernet cable is connected between the **LAN** port on the AT-HDR-SW-52ED and the network.
2. Launch a web browser and enter the IP address of the unit.
3. The AT-HDR-SW-52ED **Register** page will be displayed.
4. Create a username and password.
5. Click the **Register** button.
6. The **Login** page will be displayed.
7. Enter the username and password that was created during the registration process.
8. Click the **Login** button.
9. Refer to User Manual for more information on using the built-in web server.



Notes

Notes

Warranty

To view the product warranty, use the following link or QR code:

<https://atlona.com/warranty/>.



English Declaration of Conformity

The English version can be found under the resources tab at:

<https://atlona.com/product/at-hdr-sw-52ed/>.



Chinese Declaration of Conformity 中国RoHS合格声明

由SKU列出於:

<https://atlona.com/about-us/china-rohs/>.



HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI licensing Administrator, Inc.



US International
atlona.com • 408.962.0515 • 41.43.508.4321